




MOUNTING INSTRUCTIONS

Kenworth T-600

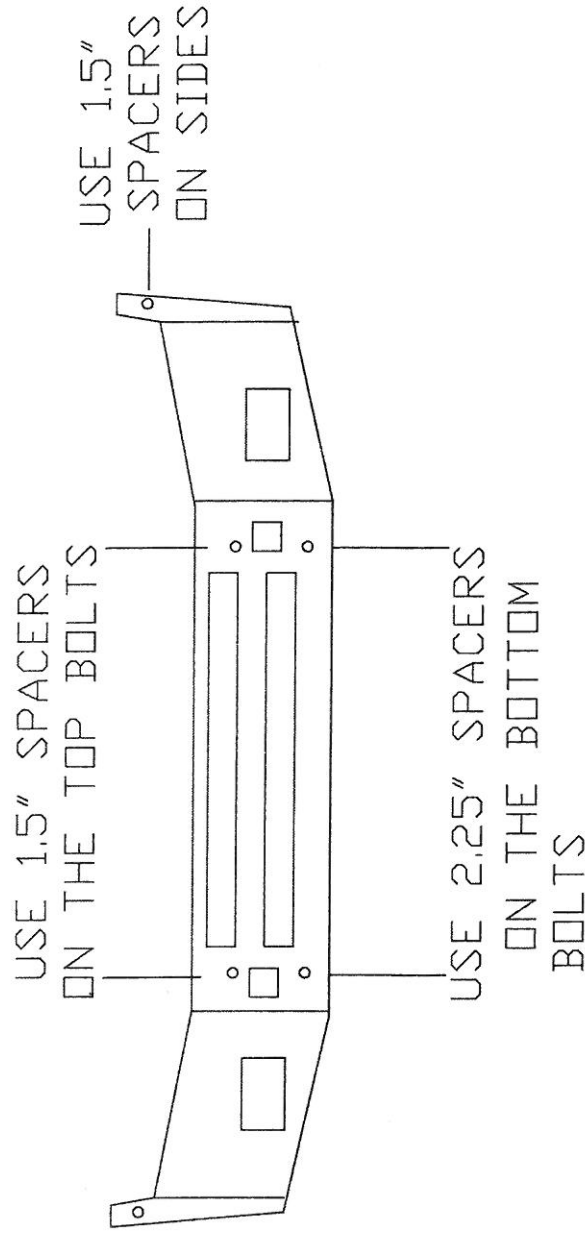

1. Mount bumper to frame of truck (do not tighten).
2. Adjust bumper to fit truck and tighten bolts.
3. DO NOT USE IMPACT WRENCH TO TIGHTEN BOLTS ON FACE OF BUMPER.