


TRUCK-TOUGH® ADAPTOR PLATES SK-1685

KIT CONTENTS:

228728-05	1200947-002	1202382-001	236987-01
Spacers x4	Flange Nuts x4	Small Flange Nuts (Fire Extinguisher Option) x2	
			

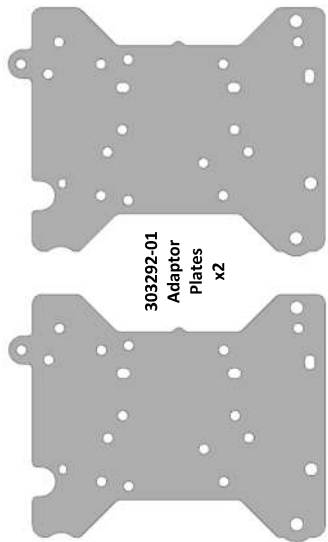

INSTRUCTIONS:

1. Locate the Truck Make Configuration and Seat Model on this diagram.
2. Note: Plates must be installed onto seat first.
3. Locate the proper mounting holes in the Seat Base. With the Seat lying on its back, ensure the Plates are in the correct orientation and install the Bolts through the corresponding holes from the bottom up.
5. Torque each fastener 20lbs ft. +/- 2. (27Nm +/- 3)
6. Spacers are provided to place in-between the plates and floor mounting holes (If required).
7. Torque fasteners and adjust tether lengths to factory specifications. **New floor mounting hardware and floor tethers are always recommended. See Disclaimer below.*

Disclaimer: By choosing to install this kit, you are taking full responsibility of it's proper installation. As with all aftermarket seat installs, correct fastener, torque values, and tether lengths are vital to the seat's operation and safety of the Driver. Refer to the OE's service manual for more info.



= Cab Floor Mounting Holes



= National Mounting Holes




= Bostrom Mounting Holes



• PETERBILT 579, 589

• KENWORTH T680, T880


* Floor Tethers are required for this configuration. **6205011-001** Seat Belt Extension & Tether Kit may be required when replacing a Non-tethered OE Seat.

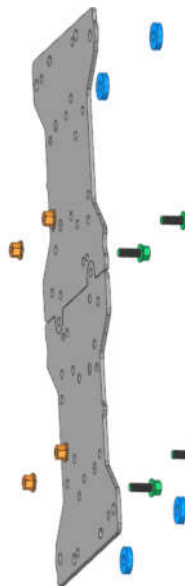


CONFIGURATION

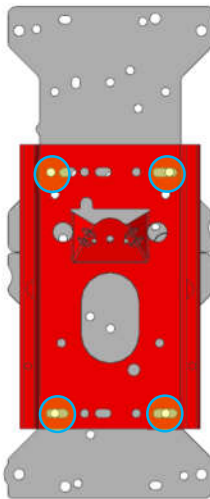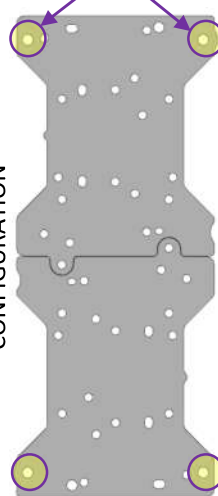

National Commodore & Admiral

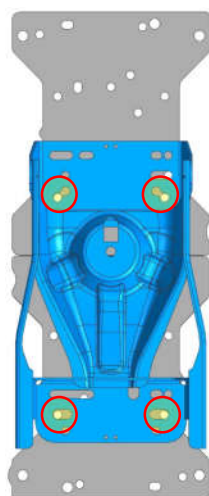


Bostrom Pro-Ride

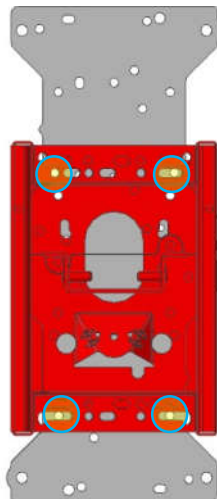


FRONT

FRONT

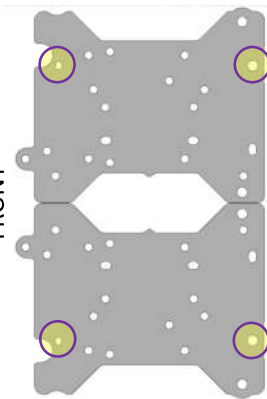


CONFIGURATION


• INTERNATIONAL PRO STAR, LONE STAR, LT,

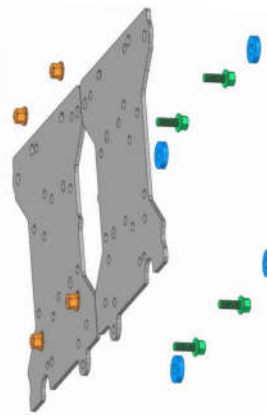

National Ensing, Captain, & Corsair

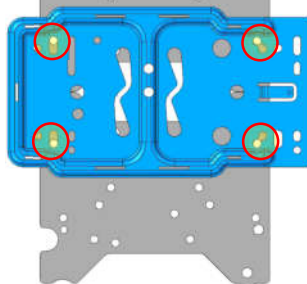


National Commodore & Admiral



VOLVO VNR, VNL

National Ensing, Captain, & Corsair

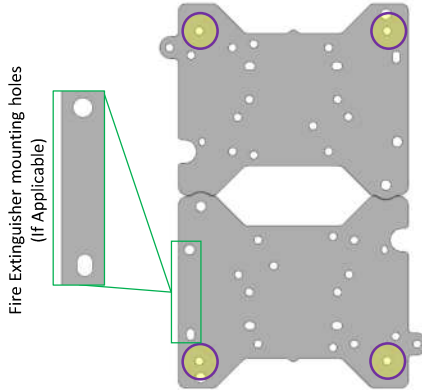

CONFIGURATION

National Commodore & Admiral

Fire Extinguisher mounting holes
(If Applicable)

